

- ❖ 8x NOC 24 V Relay Outputs
- ❖ 1x Slot for IF Module<sup>(1)</sup>
- ❖ Operating Range  $-40^{\circ}\text{C}$  to  $+70^{\circ}\text{C}$
- ❖ 600 W Integrated Surge Protections

RE8.2 is an industrial module which can be easily adapted for a wide range of tasks. It can be used as IPLOG-G submodule or as standalone addressable module at MODBUS RTU bus.

RE8.2E is a cost-optimized version of RE8.2 without its own CPU. It can be used only as an IPLOG-G submodule.



BOX Version



PCB Version

| PRODUCT NAME   | CODE      | NOTE                  |
|--|-----------|-----------------------|
| RE8.2-01-BOX   | 5000-1001 | 2x RS485              |
| RE8.2-01G-BOX  | 5000-1002 | 2x RS485 (isolated)   |
| RE8.2-05-BOX   | 5000-1007 | 1x RS485, 2x ALARM IN |
| RE8.2-PCB  | 0000-1000 | PCB Module            |
| RE8.2E-PCB <sup>(2)</sup>  | 0000-0900 | PCB Module            |
| For a Full Range of Interfaces Please Visit <a href="http://www.iplog.eu">www.iplog.eu</a> . |           |                       |

ORDERING


| PARAMETER              | VALUES                         | NOTE                  |
|------------------------|--------------------------------|-----------------------|
| Power Supply           | 12, 24, 48 VDC                 | 10 to 60 VDC          |
| Consumption            | Max. 1.5 W                     |                       |
| Surge Protection       | 600 W                          | 10/1000 $\mu\text{s}$ |
| Operating Range        | $-40$ to $+70^{\circ}\text{C}$ |                       |
| Storage Range          | $-40$ to $+70^{\circ}\text{C}$ |                       |
| Humidity               | Max. 95 %                      | No-condensing         |
| Dimension              | 35 x 110 x 119 mm              | W x H x D             |
| Weight                 | Max. 0.38 kg                   |                       |
| Installation           | DIN35 or Flat Surface          |                       |
| Device Class           | I                              | EN 61140              |
| Ingress Protection     | IP 20                          | EN 60529              |
| Degree of pollution    | II                             | EN 60664-1            |
| Connections            | Screw Terminals                |                       |
| Conduct. cross-section | Max. 2.5 mm <sup>2</sup>       |                       |

| PARAMETER | VALUES     | NOTE |
|-----------|------------|------|
| Series    | 32-bit MCU |      |
| Frequency | 64 MHz     |      |
| Flash     | 512 kB     |      |
| RAM       | 64 kB      |      |

### Safety Precautions



If dangerous voltage is applied to the terminals, only personnel with appropriate electrical education may perform installation and servicing of the equipment. In the event of a fault, the device must be sent to the producer for repair. The device must be earthed in accordance with national standards. We recommend the manipulation of terminal blocks, only in the event they are not in the presence of dangerous voltage. Failure to comply with this recommendation may result in the risk of electrical shock.

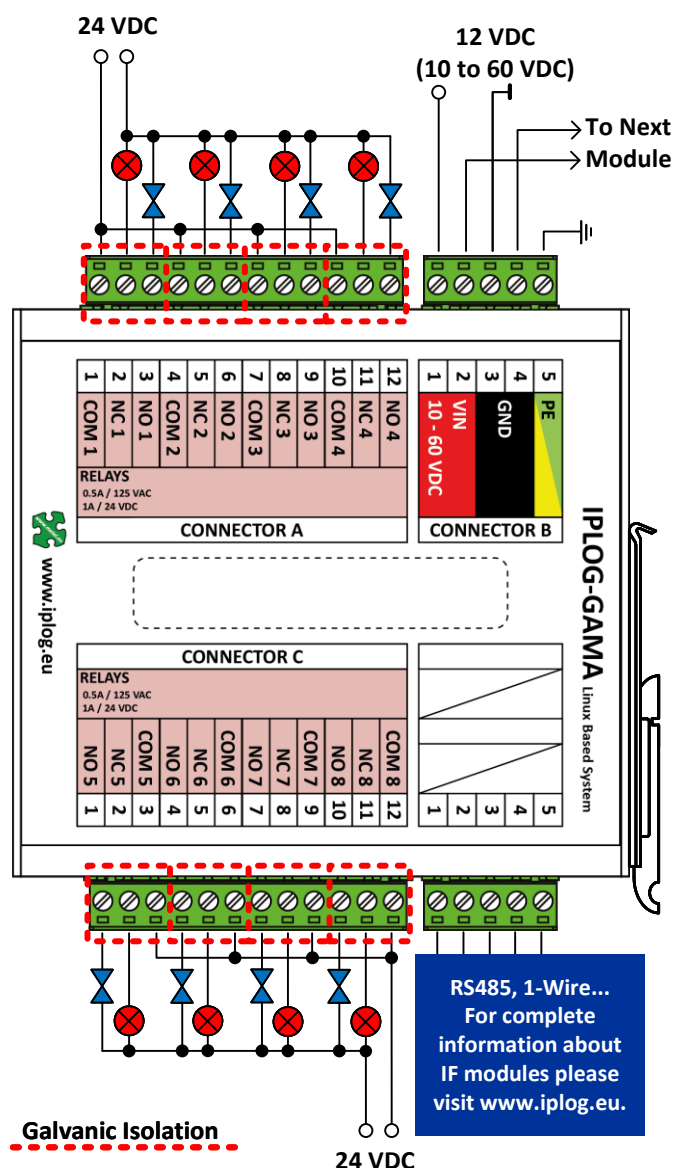

(1) Does not apply to the RE-8.2E module.

(2) RE8.2E module is not possible to use as a standalone module. Module is designed only for installation on motherboard IPLOG-G1, G2, G2E and G3.

## Location and Designation of Connectors and LEDs

NOTE: The order of the terminal numbers in the table below corresponds to the order of the terminal numbers found on the device.

| CONNECTOR A |       |                                | LEDS |                          |
|-------------|-------|--------------------------------|------|--------------------------|
| 12          | NO 4  | Normally Open                  | RE4  | Closed = Log. 1 = Lights |
| 11          | NC 4  | Normally Closed                |      |                          |
| 10          | COM 4 | Common Terminal of NOC Relay 4 |      |                          |
| 9           | NO 3  | Normally Open                  | RE3  | Closed = Log. 1 = Lights |
| 8           | NC 3  | Normally Closed                |      |                          |
| 7           | COM 3 | Common Terminal of NOC Relay 3 |      |                          |
| 6           | NO 2  | Normally Open                  | RE2  | Closed = Log. 1 = Lights |
| 5           | NC 2  | Normally Closed                |      |                          |
| 4           | COM 2 | Common Terminal of NOC Relay 2 |      |                          |
| 3           | NO 1  | Normally Open                  | RE1  | Closed = Log. 1 = Lights |
| 2           | NC 1  | Normally Closed                |      |                          |
| 1           | COM 1 | Common Terminal of NOC Relay 1 |      |                          |


| CONNECTOR B |            |   | LEDS |                                    |
|-------------|------------|---|------|------------------------------------|
| 5           | PE         | Earthing Terminal                       |      |                                    |
| 4           | GND        | Power Input – Minus Terminals           | PWR  | Power is Connected, LED Lights Up. |
| 3           |            | Terminals are Internally Interconnected |      |                                    |
| 2           | VIN        | Power Input – Plus Terminals            |      |                                    |
| 1           | 10-60 V DC | Terminals are Internally Interconnected |      |                                    |

| CONNECTOR C |       |                                | LEDS |                          |
|-------------|-------|--------------------------------|------|--------------------------|
| 12          | COM 8 | Common Terminal of NOC Relay 8 |      |                          |
| 11          | NC 8  | Normally Closed                |      |                          |
| 10          | NO 8  | Normally Open                  | RE8  | Closed = Log. 1 = Lights |
| 9           | COM 7 | Common Terminal of NOC Relay 7 |      |                          |
| 8           | NC 7  | Normally Closed                |      |                          |
| 7           | NO 7  | Normally Open                  | RE 7 | Closed = Log. 1 = Lights |
| 6           | COM 6 | Common Terminal of NOC Relay 6 |      |                          |
| 5           | NC 6  | Normally Closed                |      |                          |
| 4           | NO 6  | Normally Open                  | RE6  | Closed = Log. 1 = Lights |
| 3           | COM 5 | Common Terminal of NOC Relay 5 |      |                          |
| 2           | NC 5  | Normally Closed                |      |                          |
| 1           | NO 5  | Normally Open                  | RE 5 | Closed = Log. 1 = Lights |


| LED |                               | LED |   |
|-----|-------------------------------|-----|---|
| 1   | BUS 1 (Tx = Red / Rx = Green) | 3   | IF05 Input BI1 Sabotage Short = Log. 1 = Lights |
| 2   | BUS 2 (Tx = Red / Rx = Green) | 4   | IF05 Input BI2 Sabotage Short = Log. 1 = Lights |

Applies only to the RE-8.2 module, which can be used as a stand-alone IO module.


### Galvanic Isolation

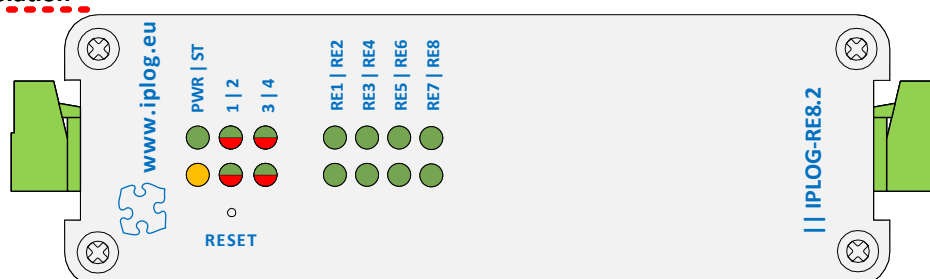

## BOX Version Dimensions

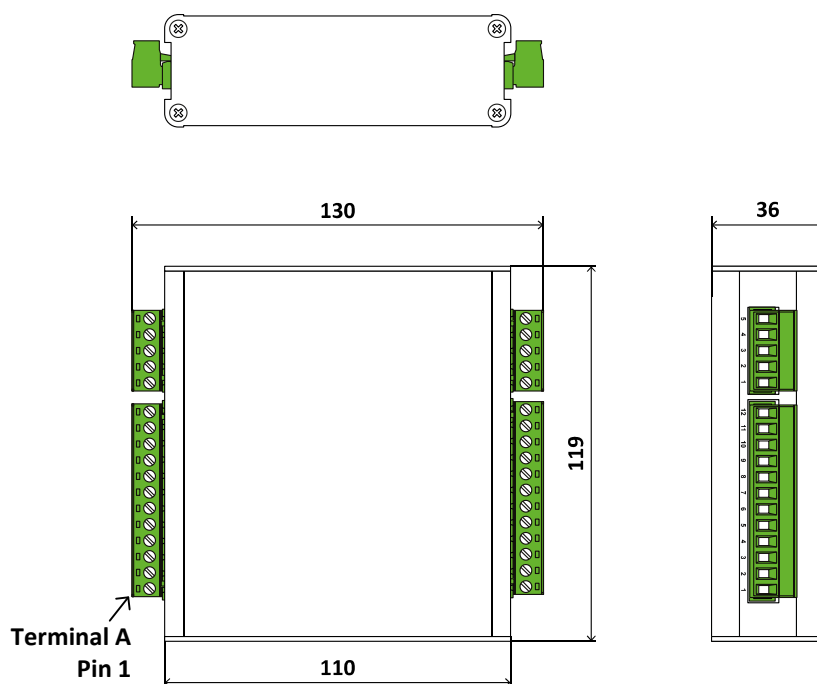

## BOX Version Installation

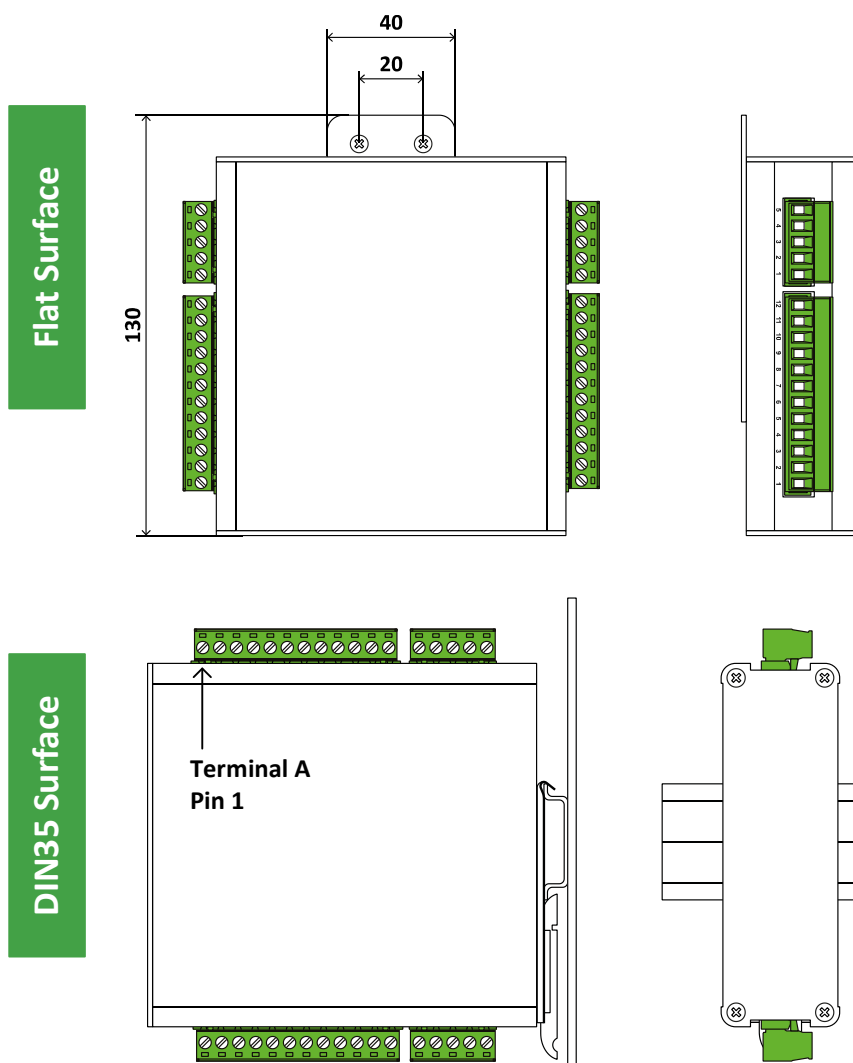

For installation we recommend using M3 screws and a flat surface holder from accessories.

For installation we recommend using M3 screws and DIN35 holder from accessories.

## Default Settings of MODBUS Communication

Device ID: 1 | Speed: 115 200 | Parity: None | Data bits: 8 | Stop bits: 1

### Modbus registers

|                       | Subject                              | Type  | R/W | Value  | Offset  |
|-----------------------|--------------------------------------|-------|-----|--|---------|
| Device Identification | Product Type                         | u8[3] | R   |  | 1002-04 |
|                       | Serial Number                        | u32   | R   |  | 1005-06 |
|                       | PCB Version                          | u32   | R   |  | 1007-08 |
|                       | PCB Revision                         | u16   | R   |  | 1009    |
|                       | FW Version Major                     | u16   | R   |  | 1010    |
|                       | FW Version Minor                     | u16   | R   |  | 1011    |
|                       | FW Version - Revision                | u32   | R   |  | 1012-13 |
|                       | IF#01 Slot State                     | u16   | R   | 0 = N/A<br>1 = IF#01 not Inserted<br>2 = IF#01 Inserted, CRC error<br>3 = IF#01 Inserted, CRC OK | 1021    |
|                       | IF#01 Product Type                   | u8[3] | R   |  | 1022-24 |
|                       | IF#01 Serial Number                  | u32   | R   |  | 1025-26 |
| Device Control        | Reset                                | u16   | RW  | 55203 = To Reboot  | 1201    |
|                       | Bootloader / Application             | u16   | R   | 0x00A – Application,<br>0x00B – Bootloader   | 1203    |
|                       | Restart to Bootloader <sup>(1)</sup> | u16   | RW  | 617 = To Bootloader<br>else = deactivate bootloader  | 1204    |
| Device Status         | Board Power Voltage                  | u16   | R   | 105 = 10,5V  | 1311    |
|                       | Board Temperature                    | s16   | R   | -200 = -20,0°C<br>250 = 25,0°C   | 1321    |

<sup>(1)</sup> To activate the bootloader, it is necessary to write a value of 617 in the registry and restart the device. To reactivate the application, enter any value other than 617 in the appropriate registry and restart the device. If the device is in the bootloader, the LED 1 will flash red.

|                | Subject        | Type | R/W | Value   | Offset |
|----------------|----------------|------|-----|---|--------|
| BUS 1 Settings | Baudrate       | u16  | RW  | 192 = 19 200 bps<br>1152 = 115 200 bps<br>9216 = 921 600 bps<br>10000 = 1 000 000 bps | 2110   |
|                | Databits       | u16  | RW  | 8 = 8b, 9 = 9b  | 2111   |
|                | Parity         | u16  | RW  | 78 = None<br>69 = Even<br>79 = Odd  | 2112   |
|                | Stopbits       | u16  | RW  | 10=1, 20=2, 15=1,5  | 2113   |
|                | MODBUS address | u16  | RW  | 1 - 247   | 2120   |


|                        | Subject                         | Channel | Type | R/W | Value         | Offset |
|------------------------|---------------------------------|---------|------|-----|---------------|--------|
| IF-05 States of Inputs | Balanced Input 1 <sub>BIN</sub> | DI#33   | bit  | R   | 0 = inactive  | 3033   |
|                        | Balanced Input 2 <sub>BIN</sub> | DI#34   | bit  | R   | 1 = active    | 3034   |
|                        | Balanced Input 1                | AI#33   | u16  | R   | 1000 = 1000 Ω | 5033   |
|                        | Balanced Input 2                | AI#34   | u16  | R   | 0 = 0 Ω       | 5034   |

|                                | Subject      | Channel       | Type | R/W | Value                      | Offset |
|--------------------------------|--------------|---------------|------|-----|----------------------------|--------|
| <b>States of Relay Outputs</b> | COIL Relay 1 | DI#01         | bit  | R   | 0 = inactive<br>1 = active | 3001   |
|                                | COIL Relay 2 | DI#02         | bit  | R   |                            | 3002   |
|                                | COIL Relay 3 | DI#03         | bit  | R   |                            | 3003   |
|                                | COIL Relay 4 | DI#04         | bit  | R   |                            | 3004   |
|                                | COIL Relay 5 | DI#05         | bit  | R   |                            | 3005   |
|                                | COIL Relay 6 | DI#06         | bit  | R   |                            | 3006   |
|                                | COIL Relay 7 | DI#07         | bit  | R   |                            | 3007   |
|                                | COIL Relay 8 | DI#08         | bit  | R   |                            | 3008   |
|                                | Inputs       | DI#16 - DI#01 | u16  | R   | 0x0000 - 0x00FF            | 3001   |


|                      | Subject        | Channel       | Type | R/W | Value                      | Offset |
|----------------------|----------------|---------------|------|-----|----------------------------|--------|
| <b>Relay Outputs</b> | Relay Output 1 | DO#01         | bit  | RW  | 0 = inactive<br>1 = active | 4001   |
|                      | Relay Output 2 | DO#02         | bit  | RW  |                            | 4002   |
|                      | Relay Output 3 | DO#03         | bit  | RW  |                            | 4003   |
|                      | Relay Output 4 | DO#04         | bit  | RW  |                            | 4004   |
|                      | Relay Output 5 | DO#05         | bit  | RW  |                            | 4005   |
|                      | Relay Output 6 | DO#06         | bit  | RW  |                            | 4006   |
|                      | Relay Output 7 | DO#07         | bit  | RW  |                            | 4007   |
|                      | Relay Output 8 | DO#08         | bit  | RW  |                            | 4008   |
|                      | Outputs        | DO#16 - DO#01 | u16  | RW  | 0x0000 - 0x00FF            | 4001   |

Relay outputs are capable of switching loads with either AC or DC voltage. Relay Outputs are accessible from METEL IEC 61131-3 IDE or directly from Linux scripts and can be configured independently of each other. Logical state of each output is signalized by the relevant LED diode on the front panel. For details please see the table „Location and Designation of Connectors and LEDs “.

## Internal Connection

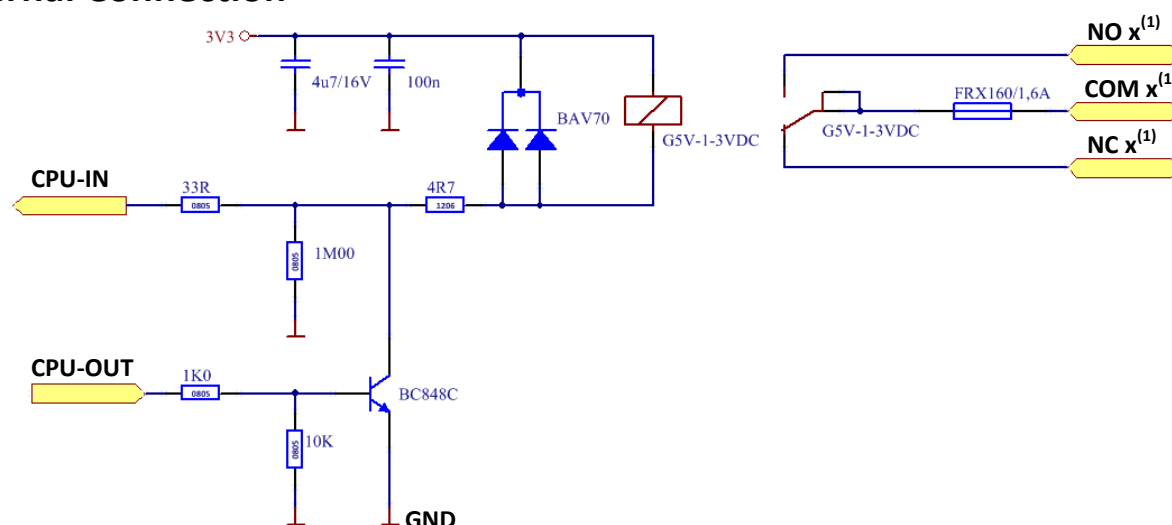

## Examples of Connections

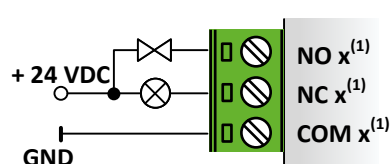

Relay NOC (Changeover) output has a common terminal COM. The two state relay can switch both AC and DC voltages to load. In the non-voltage state are relays terminals NO  $x^{(1)}$  – COM  $x^{(1)}$  disconnected and NC  $x^{(1)}$  – COM  $x^{(1)}$  connected. The relay is turned on when program set logic 1 at its coil. When the relay is turned on, corresponding REx<sup>(1)</sup> LED diode on the front side lights up (in default configuration).



Relay terminals must be protected with an external circuit breaker or fuse to prevent the rated current of the terminal or the load being exceeded. When switching inductive load it is recommended to protect relay outputs with an appropriate external component (e.g. varistor, RC circuit, or diode).

## Technical Parameters

| Parameter           | Value                | Note                            |
|---------------------|----------------------|---------------------------------|
| Contact Type        | NOC                  | Changeover Relay                |
| Number of Poles     | 1                    |                                 |
| Max. Load           | 0.5 A / 120 VAC      | Resistive Load                  |
|                     | 1 A / 24 VDC         | Resistive Load                  |
| Electrical Lifetime | 3,000,000 Operations |                                 |
| Isolation Voltage   | 1.000 Vrms / 1 min.  | Terminals to Electronic or Case |

(1) The letter „x“ replaces the output number.





The PE terminal must be earthed according to the applicable standards in the country of installation. Correct grounding protects personnel against electric shock and improves device immunity from interferences. If dangerous voltage is applied to the terminals, only personnel with appropriate electrical education may perform installation and servicing of the equipment. Before any manipulation with the device, including disconnecting and connecting the terminals, the dangerous voltage must be disconnected.

## POWER INPUT

The supply voltage is connected to VIN and GND terminals. The terminals are doubled for easier connection between the modules installed side by side.

### Internal Connection of POWER INPUT

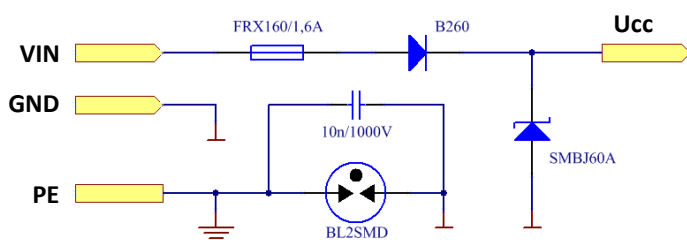


 The cover of the device is galvanically connected to the PE terminal which is galvanically isolated from the device electronic. It allows the user to use the device even in systems with a grounded + pole.

| Parameter                   | Value        | Note              |
|-----------------------------|--------------|-------------------|
| Input Voltage Range         | 10 to 60 VDC |                   |
| Surge Protection            | 600 W        | 10 / 1000 $\mu$ s |
| Short Circuit Protection    | Polyswitch   |                   |
| Reverse Polarity Protection | Diode        |                   |


IO modules include one IF slot which can be used for IF modules. The main purposes of the IF modules are to provide:

- ❖ RS485 connectivity if the IO module board is used in the standalone addressable IO module communicating with PLC via the RS485 bus
- ❖ Provides serial interfaces for communication with other systems
- ❖ Additional inputs and outputs into system

Samostatný IF modul

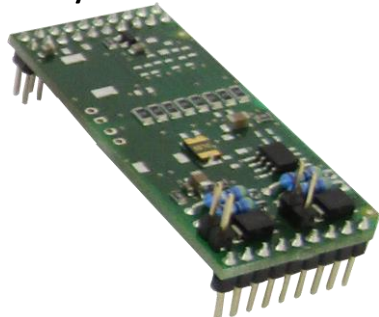

IF modul osazený na IO modulu

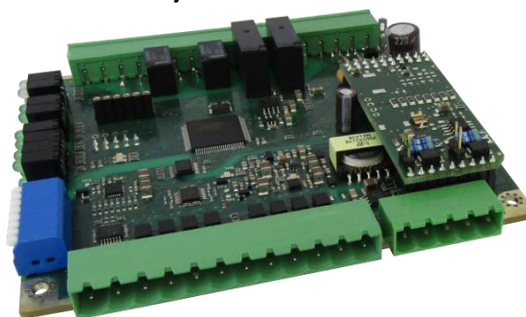

IF modules must be plugged into the IF slot when the power is turned off. After, the power is turned on the new IF module is automatically detected.

When ordering, we recommend using the online configurator available at [www.iplog.eu](http://www.iplog.eu).

## Overview Table of IF Modules

| ORDERING NAME | DESCRIPTION                         | CONNECTOR D |          |         |          |          |
|---------------|-------------------------------------|-------------|----------|---------|----------|----------|
|               |                                     | 1           | 2        | 3       | 4        | 5        |
| IF-01         | 2x RS485                            | A1+         | B1-      | GND     | B2-      | A2+      |
| IF-01G        | 2x RS485 ISO                        | A1+         | B1-      | GND-ISO | B2-      | A2+      |
| IF-02         | 2x RS232                            | Rx1         | Tx1      | GND     | Rx2      | Tx2      |
| IF-02G        | 2x RS232 ISO                        | Rx1         | Tx1      | GND-ISO | Rx2      | Tx2      |
| IF-04G        | RS485 ISO, DALI                     | A+          | B-       | GND-ISO | -D BUS   | +D BUS   |
| IF-05         | RS485, 2x INPUTS <sup>(1)</sup>     | A+          | B-       | GND     | BI 2     | BI 1     |
| IF-06         | AUDIO                               | OUT R       | OUT L    | GND     | IN R     | IN L     |
| IF-07G        | RS485 ISO, 1-Wire                   | A+          | B-       | GND-ISO | 1-Wire   | 5V0-ISO  |
| IF-09         | RS485, M-Bus                        | A+          | B-       | GND     | M-Bus+   | M-Bus-   |
| IF-10         | KNX                                 | BUS+        | BUS+     | NC      | BUS-     | BUS-     |
| IF-11         | Wiegand, 2x INPUTS <sup>(1)</sup>   | Data 0      | Data 1   | GND     | BI 2     | BI 1     |
| IF-12         | 4x INPUTS <sup>(1)</sup>            | BI 4        | BI 3     | GND     | BI 2     | BI 1     |
| IF-13         | RS232 (CTS, RTS, Rx, Tx)            | CTS         | RTS      | GND     | Rx       | Tx       |
| IF-13G        | RS232 (CTS, RTS, Rx, Tx) ISO        | CTS         | RTS      | GND-ISO | Rx       | Tx       |
| IF-14G        | 4x DIGITAL INPUTS (24V)             | ISO DI 4    | ISO DI 3 | GND-ISO | ISO DI 2 | ISO DI 1 |
| IF-15         | 4x OC (NPN) OUTPUTS                 | OC 4        | OC 3     | GND     | OC 2     | OC 1     |
| IF-15G        | 4x OC (NPN) OUTPUTS ISO             | ISO OC 4    | ISO OC 3 | GND-ISO | ISO OC 2 | ISO OC 1 |
| IF-17G        | 1x RS485, 1x RS232                  | A+          | B-       | GND-ISO | Rx       | Tx       |
| IF-18G        | 1x LORA-EP1, 1x RS485               | A+          | B-       | GND-ISO | Tx/Rx    | VCC      |
| IF-21         | 2x INPUTS <sup>(1)</sup> , 1x RELAY | COM         | NO       | GND     | BI 2     | BI 1     |
| IF-22G        | 2x DI. INPUTS 24V, 1x RELAY         | COM         | NO       | GND-ISO | ISO DI 2 | ISO DI 1 |

<sup>(1)</sup> Alarm / 5V Digital Inputs. It does not apply to combination with the BI8.1 and BI8.4 module, where they only work as digital.

IF-

That way labeled IF modules are suitable for standalone IO modules. They are always connected to a PLC or LAN-RING switch via the RS485 bus.